

***1080i Digital Photo and  
Music Media Player ID# 537***



**Operation Manual**

 
## Introduction

Congratulations on purchasing the 1080i Digital Photo and Music Media Player. This product is designed specially to help you view the photos and/or play the MP3 music from the Secure Digital Card SD/MMC(3.2)/USB device to the TV. The Digital Photo and Music Media Player can easily play as the slide show to watch high quality TV at home, Digital signage on an exhibition, Digital signage on elevator or any-where you desire.

## Features

1. Supports OSD (On-Screen-Display) menu operation
2. Supports high resolution output up to 1080i
3. Supports image formats: JPEG/BMP
4. Supports audio formats: MP3/WMA
5. Supports image rotation/Zoom in/Zoom out for single page
6. Slide show
7. Memory Card: Secure Digital Card (SD Card)/MMC(3.2)
8. Embedded USB 1.1 host controller for USB flash drive connection
9. USB only support FAT32
10. IR remote control
11. Easy to install and simple to operate


## Operating Functions and Controls Front Panel & Rear Panel

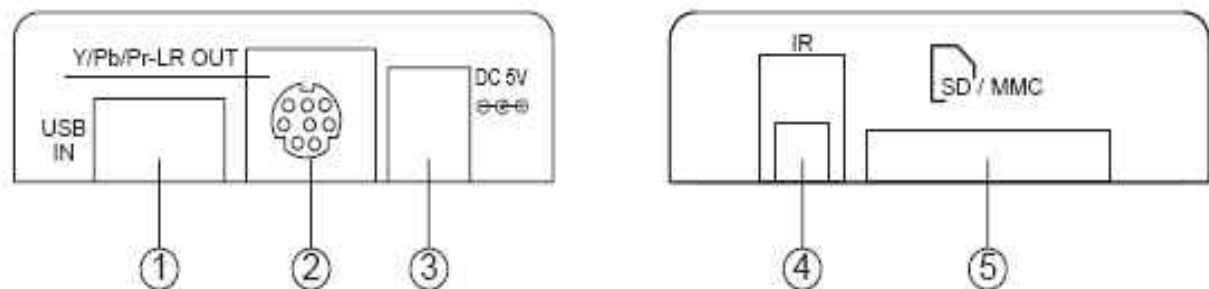

- 1 . USB IN: USB device input.
- 2 . Y/Pb/Pr LR OUT (S-Video Jack): Connect to Television/monitor (Refer to DPP-1080i connections).
- 3 . DC 5V: Connect power adapter to Household AC outlet.
- 4 . IR: IR Sensor for Remote control.
- 5 . SD/MMC: Support SD/MMC3.2 memory card input.

## Remote Control

 1. **CARD/USB:** Press to switch source input
2. **SAVE:** Press to save rotate photo
3. **COPY:** Copy file to USB or SD card
4. **VIEW:** To switch the display: Original/ Full Screen/16:9
5. **PHOTO MODE:** Play photo
6. **EXIT:** Exit/Stop
7. **PREVIOUS PAGE:** Return previous page
8. **POWER:** Press to turn power ON and OFF
9. **ROTATE:** Right Rotate 90°/180°/270°
10. **VOL+:** Press to increase volume
11. **DELETE:** Delete the files
12. **VOL-:** Press to decrease volume
13. **ZOOM:** Zoom 2x/4x/6x/8x
14. **SLIDE:** Photo Slide Show with background music
15. **MUSIC MODE:** Play Music
16. **MENU:** Press to view the OSD menu
17. **OK:** Press to confirm selection of menu item
18. **UP/DOWN/LEFT/RIGHT:** Press to move up, down, left, or right through menu items
19. **NEXT PAGE:** Press to go to next page

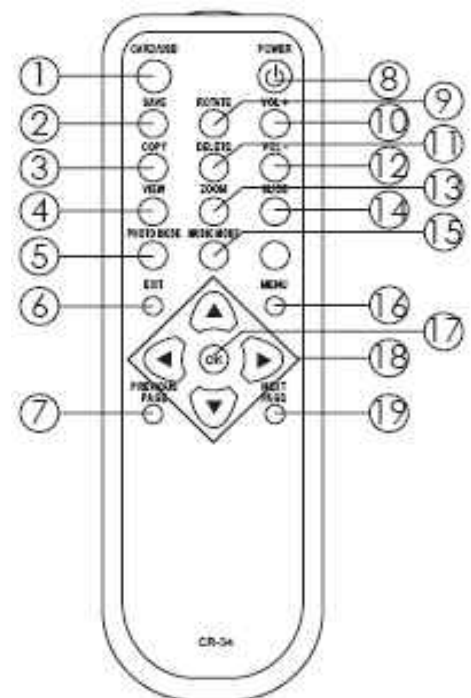


## Using the Digital Photo and Music Media Player

After connecting the DPP-1080i to the TV and Power on, you are ready to start viewing the photo and play the music. This chapter describes how to turn on the device and how to control On-Screen Display (OSD) menu to configure the device settings.

## Digital Photo and Music Media Player Connections

 The description of the component video input terminals depends on the television or monitor (Y/Pb/Pr-LR) connect to terminals of the same color.

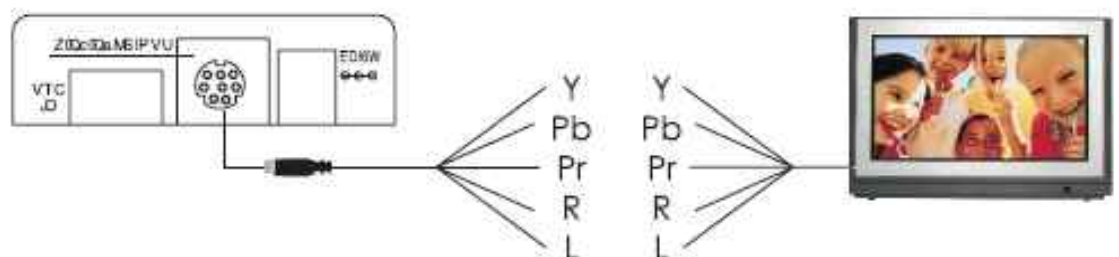

## Turning on Power

Connecting the power adapter to the Digital Photo and Music Media Player and press the POWER button on the remote control to turn on the Digital Photo and Music Media Player. Press the button again to turn the device off.

## Using the OSD Menu

Press the Menu button to view the OSD menu. The menu consists of eight sub-menus including View, Slide Show Speed, Slide Show Shuffle, Music Repeat, Copy File, Delete File, Reset Settings and software version. You can access the sub menus by using / buttons and press the OK button. Press the Exit button to exit the menu at any time to return to higher level menus. Refer to the following sections to learn more about using the OSD menu.

## View

Press Menu button to enter View mode and press OK button to choose output display format.

Use / buttons to select and press OK button to confirm.

Original: Keep the same Aspect Ratio Full Screen: Expend to screen size 16:9: Select 16:9 display

View	Original
Slide Show Speed	FullScreen
Slide Show Shuffle	16:9
Music Repeat	
Copy File	
Delete File	
Reset Settings	
Ver 2.3-070524	

## Slide Show Speed

Press ▼ button to select Slide Show Speed mode.

FAST: Around 3 sec  
NORMAL : Around 10 sec  
SLOW: Around 40sec

View	
Slide Show Speed	Fast
Slide Show Shuffle	Normal
Music Repeat	Slow
Copy File	
Delete File	
Reset Settings	
Ver 2.3-070524	

## Slide Show Shuffle

Press ▼ button to select Slide Show Shuffle mode.

ON: Random Access  
OFF: Default Setting

View	
Slide Show Speed	
Slide Show Shuffle	On
Music Repeat	Off
Copy File	
Delete File	
Reset Settings	
Ver 2.3-070524	

## Music Repeat

Press ▼ buttons to select Music Repeat mode  
One: Just play once  
ALL: Repeat play all photo/music  
OFF: Display one single photo

View	
Slide Show Speed	
Slide Show Shuffle	
<b>Music Repeat</b>	One
Copy File□□	All
Delete File□□	Off
Reset Settings	
Ver 2.3-070524	

## Copy File

Press ▼ buttons to copy the files from USB to SD card or vice versa

View	
Slide Show Speed	
Slide Show Shuffle	
Music Repeat	
<b>Copy File</b>	
Delete File	
Reset Settings	
Ver 2.3-070524	

## Delete File

Press ▼ buttons to select the delete the music files.

YES: To delete the Photo or Music file  
NO: Default setting

View	
Slide Show Speed	
Slide Show Shuffle	
Music Repeat	
Copy File	
<b>Delete File</b>	Are you sure?
Reset Settings□□	Yes
Ver 2.3-070524□□	No

## Reset Settings

Press ▼ buttons to select the Reset Settings mode.  
YES: Reset the Original setting

NO: Default Setting

View	
Slide Show Speed	
Slide Show Shuffle	
Music Repeat	
Copy File	
Delete File	
<b>Reset Settings</b>	Are you sure?
Ver 2.3-070524□□	Yes
□□□	No

## Specifications

- **Input ports:** USB/SD/MMC(3.2)
- **Output ports:** YPbPr-LR stereo
- **Power Supply:** 5V DV (US/EU standards, CE/FCC/UL certified)
- **Remote Control:** Discrete IR remote
- **Dimensions (mm):** 100(W) x 64(D) x 18.5(H)
- **Weight(g):** 95
- **Chassis Material:** Plastic Silk Skin
- **Color:** White/Gray
- **Operating Temperature:** Operating from 0°C ~ 70°C