

4-in 1-out Video/SVideo Switcher w/RS232 ID# 600



Operation Manual

Introduction


The 4-in 1-out Video/SVideo Switcher w/RS232 is designed for switching between video & S-video sources. Such as VCR,DVD player... to share one TV display.

Features

- LED indicators.
- IR remote control
- Support standard video sources: 480i, 576i.
- Plug and play, easy to install and operate.
- CVSD-41AR can be controlled either through input selection button on the front panel or using included infrared remote control.
- RS-232 interface allows control from a distant device.
- Ideal for presentation and large shop integration.
- Support audio format: L/R (analog) or PC AMP speaker system (option)


Operation Controls and Functions

Front Panel

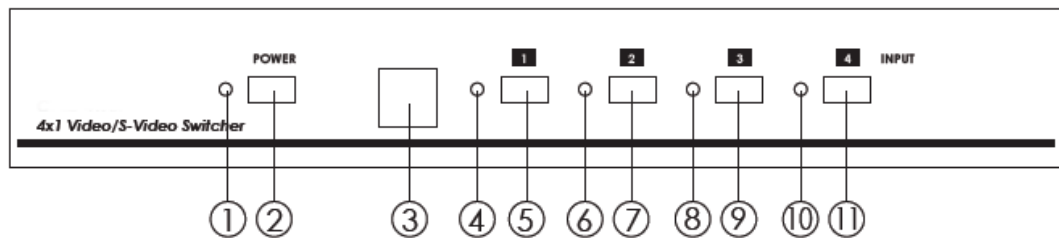

1. Power indicator LED.
2. Power ON/OFF switch: Push the button to turn ON/OFF the power.
3. IR sensor: Infrared remote control sensor.
4. Input 1 indicator LED .
5. Input 1 switch: Push the button, LED lights up, source 1 is selected.
6. Input 2 indicator LED.
7. Input 2 switch: Push the button, LED lights up, source 2 is selected.
8. Input 3 indicator LED .
9. Input 3 switch: Push the button, LED lights up, source 3 is selected.
10. Input 4 indicator LED.
11. Input 4 switch: Push the button, LED lights up, source 4 is selected.


Rear Panel

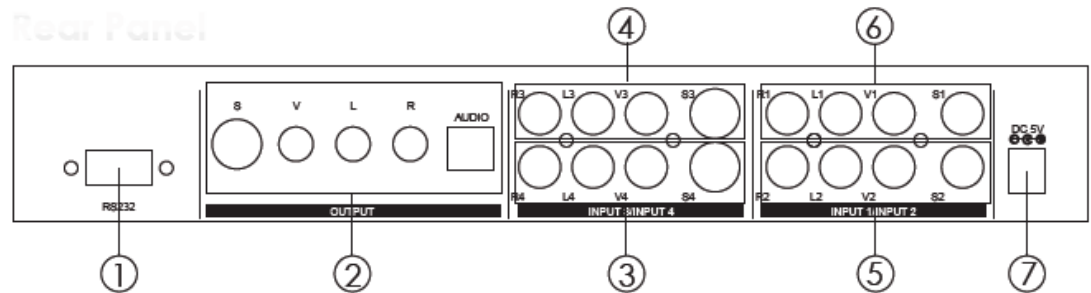

1. RS-232: 9-pin D-sub female connector for connecting to your other control console for remote control.
2. CV/SV+Audio output:
 Use a CV/SV cable to connect to your display.
 Use a 1 RCA to 1 RCA video cable to your display.
 Use a 2 RCA to 2 RCA audio cable to your display.
 (Option) connects to your PC AMP speaker system.
3. CV/SV + Audio input 4: Use a CV/SV cable to connect to your source 4.
4. CV/SV + Audio input 3: Use a CV/SV cable to connect to your source 3.
5. CV/SV + Audio input 2: Use a CV/SV cable to connect to your source 2.
6. CV/SV + Audio input 1: Use a CV/SV cable to connect to your source 1.
7. DC power jack : 5V1A power input ,center +.


Remote Control

1. Power: Switch between power ON and Standby.
 2. Press button 1 to select source 1.
 3. Press button 2 to select source 2.
 4. Press button 3 to select source 3.
 5. Press button 4 to select source 4.
- Note: Replacement battery can be found at a local electronic retail store.

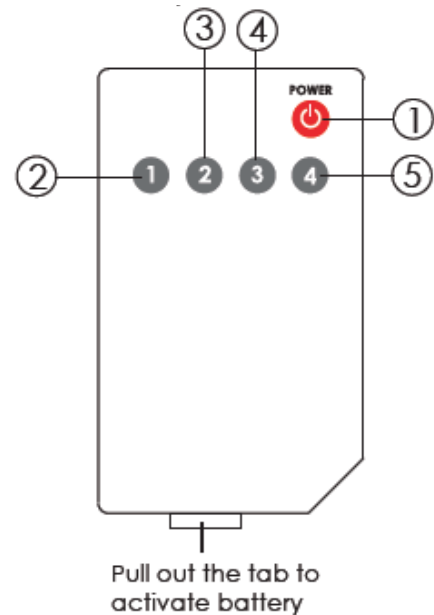

Connection and Installation

Command Code	Comment
"1" + "1"	PORT 1 ON
"1" + "2"	PORT 2 ON
"1" + "3"	PORT 3 ON
"1" + "4"	PORT 4 ON
"P" + "1"	POWER ON
"P" + "0"	POWER OFF

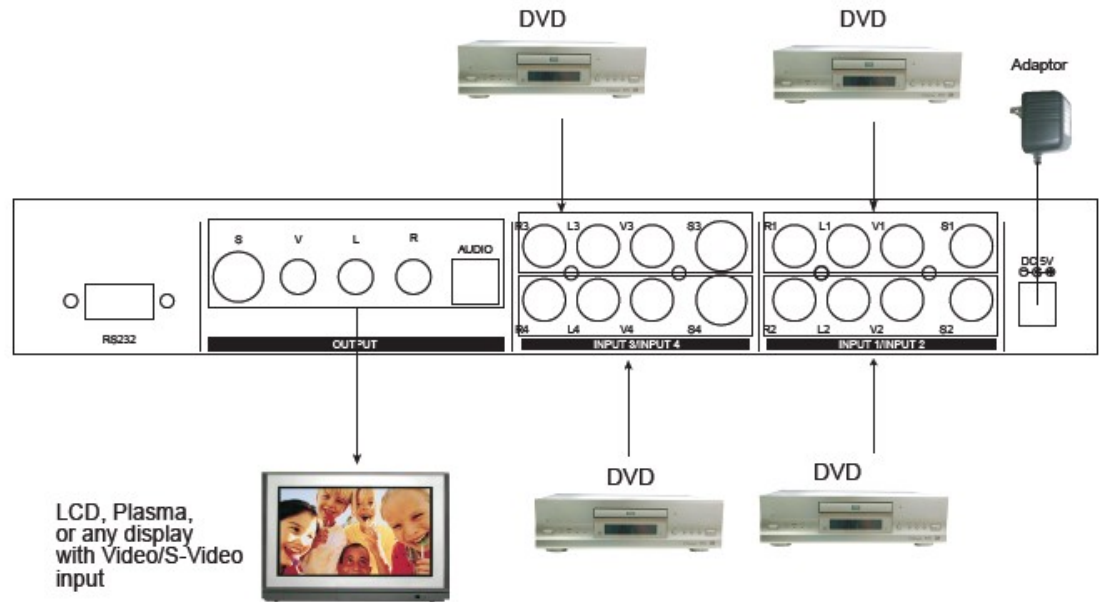

CVSD-41AR RS-232 Remote Control Protocol

* The connection between CVSD-41AR and remote controller with RS-232 modem cab
 Pins definition of modem cable

CVSD-41AR			Remote Controller	
PIN	Definition		PIN	Definition
1	NC		1	NC
2	TxD		2	RxD
3	RxD	→	3	TxD
4	NC		4	NC
5	GND		5	GND
6	NC	←	6	NC
7	NC		7	NC
8	NC		8	NC
9	NC		9	NC

* RS-232 transmission format:
 Baud Rate : 9600 bps
 Data Bit : 8 Bits
 Parity: None
 Stop Bit: 1 bit

Specifications

Input	Video: S-Video: Analog Audio: (L/R)	1 Vp-p @75 ohm Y: 1 Vp-p @ 75 ohm C: 0.286 Vp-p @75 ohm 2Vrms max 47 k ohm
Output	Video: S-Video: Analog Audio: (L/R)	1 Vp-p @75 ohm Y: 1 Vp-p @ 75 ohm C: 0.286 Vp-p @75 ohm 2Vrms max 47 k ohm
PC /YPbPr Bandwidth	650 MHz (-3db)	
Differential gain	0.05%	
Differential phase	0.05 degree	
Power consumption	5 Watts (max.)	
Power	5V 1A AC adaptor	
Dimensions	292(W)x 73(D) x 44(H)mm	
Unit gross	1.5Kgs	