

HDBaseT 4x4 UHD HDMI over CAT5e/6/7 Matrix with LAN Serving - #15393



Operation Manual

Introduction

The 4K2K 4 by 4 HDMI Matrix over CAT5e/6/7 supports the transmission of video (resolutions up to 4K2K Full HD), multi-channel digital audio and control via IR, RS-232, Telnet or WebGUI from four high definition sources to four outputs over a single CAT5e/6/7 cable (up to 100m) for each output. It supports high resolution digital audio formats such as LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio as well as 3D content that can be displayed when connecting a 3D TV and 3D source. Additionally, the LAN connectivity will allow a 100BaseT network to be served to smart TVs or games consoles. The Power over Cable (PoC) function can power compatible Receivers, providing greater flexibility in installations.

Applications

- HDMI Matrix System
- Video/TV wall display and control
- Security surveillance and control
- Commercial advertising, display and control
- University lecture hall, display and control
- Retail sales and demonstration

Features

- HDMI, HDCP1.1 and DVI compliant
- Supports HDMI 3D features
- Supports resolutions VGA~WUXGA and 4K2K @50/60(YUV_420) dependent upon the output display's EDID settings
- Supports distances up to 100 meters through CAT5e/6/7 cables
- Supports 3D signal display dependent upon the output display EDID settings
- Supports HDMI input/output up to 10 meters at 8-bit/12-bit resolution or 5 meters at 4K2K resolution
- Supports bi-directional IR from input and output locations
- Supports RS-232, remote control, on-panel control and IP Control (Telnet & Web GUI)
- 1U size design
- Supports external and internal EDID settings
- Supports LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio transmission

Note:

1. Do not connect the LAN/CONTROL port to CAT outputs of this device.
2. Do not connect more than one Ethernet/network link within the Matrix system, doing so may trigger the device to shut down.
3. The PoC function is designed for powering compatible receiver units only, non-PoC receivers will need their own power supply. Receivers of another brand may not be compatible.




System

Requirements

- HDMI equipped source devices, connect with HDMI cables or DVI equipped source, connect with DVI to HDMI cables
- HDMI equipped displays (TVs or monitors) or HDMI equipped AV Receivers, connect with HDMI cables
- Industry standard CAT5e/6/7 cables
- HDBaseT™ Receivers

Operation Controls and Functions

Front Panel

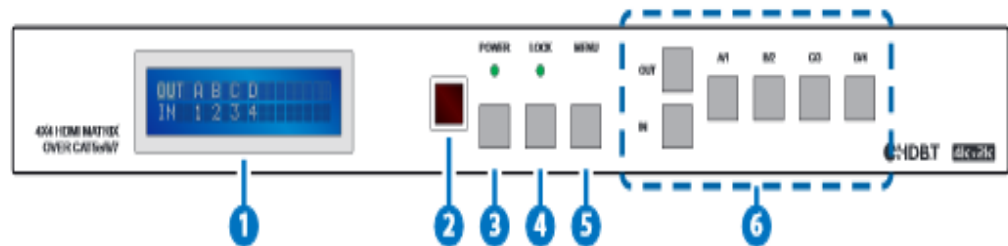

1. LCM:

Displays the setting information of each input and output setting.

2. IR:

IR Receiver window (accepts the remote control signal of this device only).

3. POWER:

Press this button to power the device on/off. The LED will illuminate green when the power is on, red when it is in 'Standby' mode.

4. LOCK:

Press this button to lock all the buttons on the panel; press again to unlock. The LED will illuminate when locked.

5. MENU:

Press this button to access the LCM menu system, from here EDID settings can be managed and IP system settings are displayed.

6. A~D/1~4 and OUT/IN:

Press the OUT or IN button to select the output or input mode and then press the required number button to make the selection accordingly.

For example, if outputs A~B need to be set to input 1 and outputs C~D need to be set to input 2, then the following sequence of button presses need to be performed:


Press: OUT►A►B►IN►1►MENU, and then press:

OUT►C►D►IN►2►MENU.

Note:

If the MENU button is not pressed the selection will not be changed.

Rear Panel

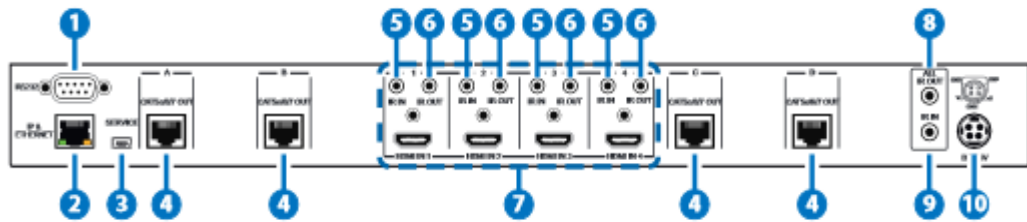

1. RS-232:

Connect to a PC or control system with D-Sub 9-pin cable for the transmission of RS-232 commands.

2. IP & ETHERNET:

This port is the link for Telnet or WebGUI controls, connect to an active Ethernet link with an RJ45 terminated cable (for further details, please refer to sections Telnet Control & Web GUI).

Warning: Please do not connect more than one active Ethernet link within the Matrix system.

3. SERVICE:

Manufacturer use only.

4. CAT5e/6/7 OUT A~D:

Connect from these CAT outputs to the CAT input port of the Receiver units with a single CAT5e/6/7 cable for HDMI Audio/Video and IR/RS-232 control signal transmission.

Warning: Please do not connect the CAT5e/6/7 cable into the Receiver's LAN port.

5. IR IN 1~4:

Connect to the IR extenders for IR signal reception. Ensure that the remote being used is within the direct line-of-sight of the IR extender for it will send out the IR signal to the selected Receiver's IR OUT.

6. IR OUT 1~4:

Connect to the IR Blasters for IR signal transmission.

Place the IR Blaster in direct line-of-sight of the equipment to be controlled for it will blaster out the IR signal received from the Receiver side chosen by input selection.

7. HDMI IN 1~4:

Connect to the HDMI input source devices such as a DVD player or a Set-top Box with HDMI cable or DVI to HDMI cable.

8. ALL IR OUT:

Connect to the IR Blaster for IR signal transmission to the source side.

Place the IR Blaster in direct line-of-sight of the equipment to be controlled for it will blaster out all signal received from the IR IN at the Receiver sides.

9. ALL IR IN:

Connect to the IR extender for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR extender for it will send out the signal to all Receiver's IR OUT.

10. DC 24V:

Plug the 24 V DC power supply into the unit and connect the adaptor to an AC outlet.

Remote Control

1. **POWER:**


Press this button to switch on the device or set it to standby mode.

2. **IN**



: Input ports selection 1~4.

3. **OUT**

: Output ports selection A~D

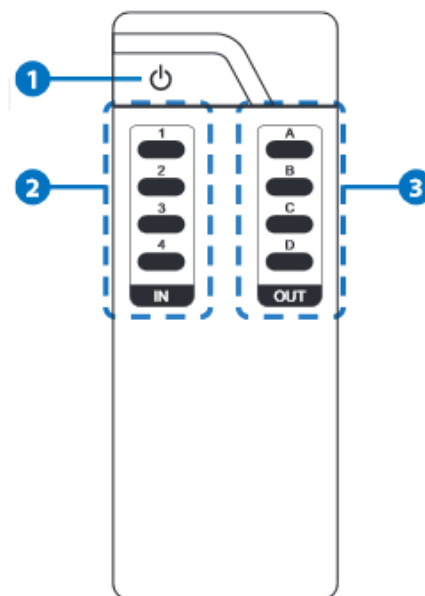

IR Cable Pin Assignment

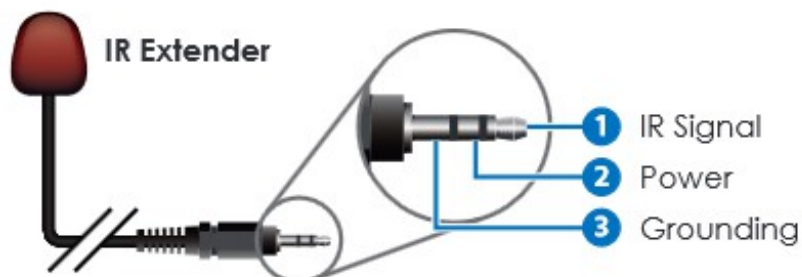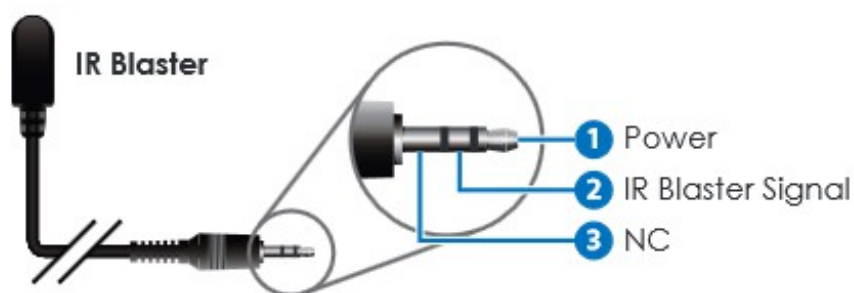

RS-232 Pin Assignment

Converter #15393			Remote Control	
PIN	Assignment		PIN	Assignment
1	NC	→ ←	1	NC
2	Tx		2	Rx
3	Rx		3	Tx
4	NC		4	NC
5	GND		5	GND
6	NC		6	NC
7	NC		7	NC
8	NC		8	NC
9	NC		9	NC

Baud Rate: 19200 bps

Data Bit: 8-bit

Parity: None

Stop Bit: 1-bit

Flow Control: None

RS-232 and Telnet Commands


Command	Description
help	Display all available commands
A1~A4	Switch Output A to 1~4
B1~B4	Switch Output B to 1~4
C1~C4	Switch Output C to 1~4
D1~D4	Switch Output D to 1~4
AB... 1~AB...4	Switch Output ABCD to 1~4 at the same time
SETIP <IP> <SubNet> <GW>	Setting IP. SubNet. GateWay<Static IP>
RSTIP	IP configuration was reset to factory defaults<DHCP>
IPCONFIG	Display the current IP config
P0	Power Off
P1	Power On
STORE 01~04	Store current I/O position (01~04)
PRESET 01~04	Recall the store I/O Position (01~04)

SHOW 01~04	Show current port's I/O position (01~04)
NAME N1 N2	Name the stored port N1(01~04) no more than 8 characters, N2 (ABCDEFGH)
I1~I4	Switch all the output to 1~4
ST	Display the current matrix state and firmware version
RS	System Reset to H4
EM	Setting EDID MODE. 1-STD 2-TV
UARTBAUD1~4	Set output A~D's uart baud rate from 1~6 1: 9600bps 2: 14400bps 3: 19200bps 4: 38400bps 5: 57600bps 6: 115200bps
UARTSW1~4	Switch output's UART to A~D and allow Matrix to send commands to Receiver's connected RS-232 device.
UARTSW0	Switch output's UART to MCU. Restoring RS-232 control to the Receiver output back to Matrix
UARTBAUD?	Display all the output's UART baud
UARTSW?	Display the UART switching state
?	Display all available commands
QUIT	Exit (Telnet only)


Note:

Any commands will not be executed unless followed by a carriage return. Commands are not case-sensitive


RS-232 UART Command Illustration Diagram

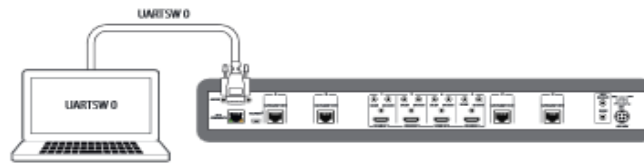


Note: This command allows RS-232 to control the Matrix.

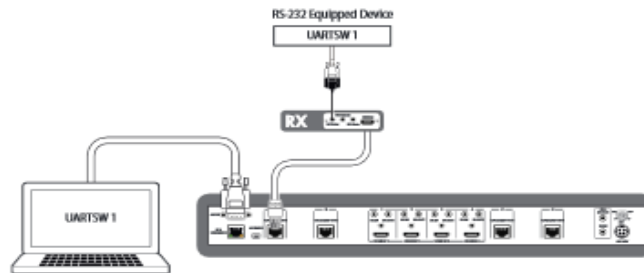


Note: This command allows RS-232 to control the RS-232 device connected to output A's Receiver.

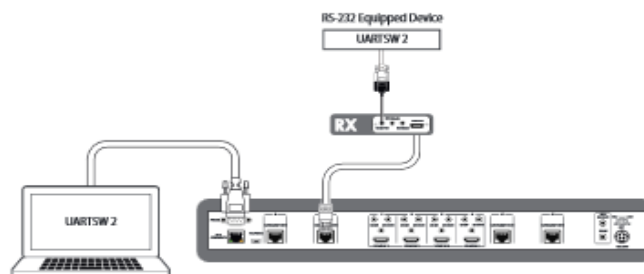

Note: This command allows RS-232 to control the RS-232 device connected to output B's Receiver.

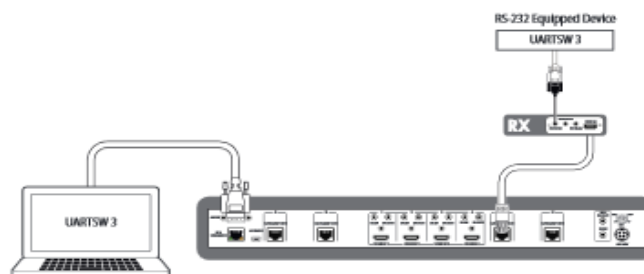

Note: This command allows RS-232 to control the RS-232 device connected to output C's Receiver.

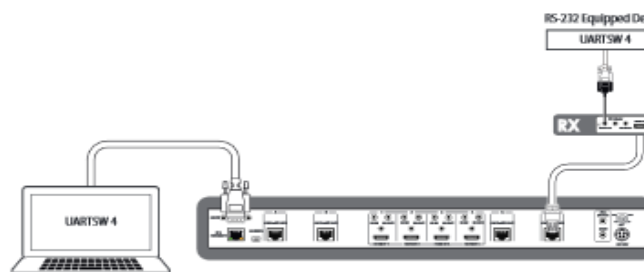

Note: This command allows RS-232 to control the RS-232 device connected to output D's Receiver.

Telnet Control

Before attempting to use the telnet control, please ensure that both the Matrix (via the 'LAN /CONTROL' port) and the PC/Laptop are connected to the active networks.

To access the telnet control in Windows 7, click on the 'Start' menu and type "cmd" in the Search field then press enter.

Under Windows XP go to the 'Start' menu and click on "Run", type "cmd" with then press enter.

Under Mac OS X, go to Go→Applications→Utilities→Terminal


See below for reference



Once in the command line interface (CLI) type "telnet", then the IP address of the unit and "23", then hit enter.

Note:

The IP address of the Matrix can be displayed on the device's LCM monitor by pressing the Menu button twice.

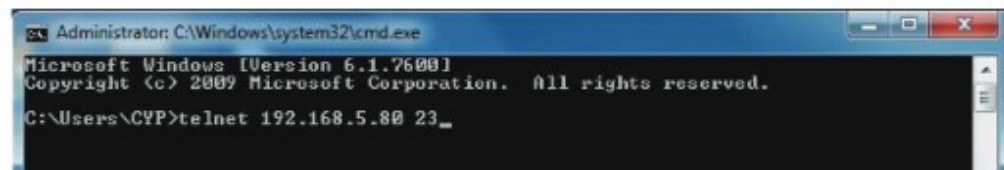

This will bring us into the device which we wish to control. Type "HELP" to list the available commands.

```

Telnet 192.168.5.39
telnet-> ?

A1~B4      : Switch Output A to 1~4
B1~B4      : Switch Output B to 1~4
C1~C4      : Switch Output C to 1~4
D1~D4      : Switch Output D to 1~4
ABCD...1~ABCD...4 : Switch output ABCD... to 1~4 at the same time
SETIP <IP> <SubNet> <GW> : Setting IP.SubNet.GateWay<Static IP>
RSTIP      : IP Configuration Was Reset To Factory Defaults<DHCP>
IPCONFIG    : Display the current IP config
P0         : Power Off
P1         : Power On
STORE 01~04: STORE current I/O position <01~04>
PRESET 01~04: RECALL the store I/O position <01~04>
SHOW 01~04: SHOW current port's I/O position <01~04>
NAME N1 N2: NAME the stored port N1<01~04> no more than 8 charactors N2<
ABCDEFGH>
I1~I4      : Switch all the output to 1~4
ST         : Display the current matrix state and firmware version
RS         : System Reset to A1,B2,C3,D4
EM         : Setting EDID MODE. 1-STD 2-TV.
UARTBAUD1~UARTBAUD4 : Setting outputA~D's uart baud (1:9600bps,2:14400bps,3:1920
0bps,4:38400bps,5:57600bps,6:115200bps)
UARTSW1~UARTSW4 : Switch output's uart to A~D
UARTSW0    : Switch output's uart to MCU
UARTSW?    : Display the uart switching state
?          : Display all available commands
QUIT       : Exit

```

Type "IPCONFIG" To show all IP configurations. To reset the IP, type "RSTIP" and to use a set static IP, type "SETIP" (For a full list of commands, see the Section on RS232 and Telnet Commands above).

Note:

Any commands will not be executed unless followed by a carriage return. Commands are case-insensitive. If the IP is changed then the IP Address required for Telnet access will also change accordingly

Web GUI Control

On a PC/Laptop that is connected to the same active network as the Matrix, open a web browser and type device's IP address on the web address entry bar. The browser will display the device's status, control and User setting pages



Click on the 'Control' tab to control power, input/output ports, EDID and reset mode

The screenshot shows the CYPRESS web interface with the 'Control' tab selected. The interface includes a header with the CYPRESS logo and a navigation bar with 'Status', 'Control', and 'User Setting' tabs. The 'Control' section contains several sub-sections: 'Power Control' with 'Power On' and 'Power Off' buttons; 'Matrix Control' with five 'OutPut Port' buttons (A, B, C, D, E) and an 'Add OutPut Port' button; 'EDID Mode' with a dropdown menu set to '1-3-3-3'; and 'System Reset' with a 'Reset' button.

Clicking on the 'User Setting' tab allows you to reset the IP configuration. The system will ask for a reboot of the device every time any of the settings are changed. The IP address needed to access the WebGUI control will also need to be changed accordingly on the web address entry bar

The screenshot shows the CYPRESS web interface with the 'User Setting' tab selected. The interface includes a header with the CYPRESS logo and a navigation bar with 'Status', 'Control', and 'User Setting' tabs. The 'User Setting' section contains an 'IP Address Selection' form with the following fields: 'Address Type' (set to 'DHCP/AutoIP'), 'Static IP Address' (192.168.0), 'Subnet Mask' (255.255.255), and 'Default Gateway' (192.168.0). An 'Update Settings' button is located at the bottom of the form.

Specifications

Video Bandwidth	340 MHz/10.2 Gbps
Input Ports	4×HDMI, 5×IR Extender, 1×RS-232, 1×RJ-45(Control), 1×Mini USB Type B (For firmware updated only)
Output Ports	4×CAT5e/6/7, 5×IR Blaster
ESD Protection	Human-body Model: ± 8kV (Air-gap discharge) ± 4kV (Contact discharge)
Power Supply	24V/3.75A DC (US/EU standards, CE/FCC/UL certified)
Dimensions	436mm (W)×249mm (D)×44mm (H)/Jacks Excluded 436 mm (W)×256.2 mm (D)×48 mm (H)/Jacks Included
Weight	3352g
Chassis Material	Metal
Silkscreen Color	Black
Operating Temperature	0 °C~40 °C/32 °F~104 °F
Storage Temperature	-20 °C~60 °C/-4 °F~140 °F
Relative Humidity	20~90% RH (non-condensing)
Power Consumption	66W

Connection Diagram

