

I : Introduction

ALLTOHDMI CONVERTER BOX converts CVBS, YPbPr, VGA, HDMI and USB media to 720p and 1080p high definition HDMI output. Respective stereo audio input is achieved for CVBS, YPbPr and VGA. Converter Box makes it convenient to connect such as DVD player, game player, Set-top box, PC and USB device etc. video sources. All inputs will be converted to high definition output. Excellent picture quality provided by the integrated noise reduction, advanced color process engine, dynamic luminance control, gamma control and 3D video decoder features.

II : Features

1x CVBS, 1xYPbPr, 1xVGA, 2x HDMI and, 2x USB inputs

USB movie, picture and music playback

720p and 1080p high definition HDMI output

PAL, NTSC and SECAM color systems supported

-5% to +5% display ratio range control

Auto Detect function (except USB)

Brightness, contrast, color, sharpness, hue control

Soft, Standard, Bright and Personal 4 preset picture modes

Picture mode setting saved for respective source

Geometry control for VGA input with auto tune function

Capture USB picture and save as user defined logo

Volume control

Remote control

Standby mode

Input formats

CVBS: PAL, NTSC, SECAM with stereo audio input

YPbPr:1080p@50/60Hz, 1080i@50/60Hz, 720p@50/60Hz, 576i/p, 480i/p with stereo audio input

VGA:640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x1024@60Hz, 1280x720@60Hz, 1360x768@60Hz, 1440x900@60Hz, 1680x1050@60Hz, 1920x1080@60Hz with stereo audio input

HDMI: 1080p@50/60Hz, 1080i@50/60Hz, 720p@50/60Hz, 576i/p, 480i/p, 640x480@60Hz, 800x600@60Hz, 1024x768@60Hz,


1280x1024@60Hz, 1280x720@60Hz, 1360x768@60Hz, 1440x900@60Hz, 1680x1050@60Hz, 1920x1080@60Hz

USB: MPEG, H.264, RM/RMVB movie decode, JPEG, BMP, PNG

Picture decode and MPEG1/2, MP3 audio decode

III: Setting

Remote controller

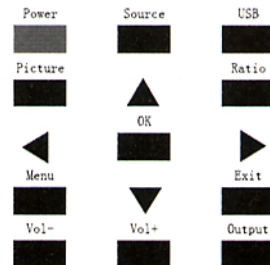

Power: Enter standby mode or re-enter normal mode

Source: Pop up source menu, press Up/Down button to select and press OK button to enter

USB: Enter USB source directly

Picture: Soft, Standard, Bright and Personal picture mode selection

Ratio: Adjust display ratio, -5% to +5% range can be set

Navigation buttons: Left, Right, Up and Down to navigate menu items or USB media files, press OK to enter

OK: Confirm and enter selection

Menu: Pop up main menu, press Menu button again to return

Exit: Close Menu or exit USB playback mode

Vol-: Decrease volume

Vol+: Increase volume

Output: Set 720p or 1080p output format


Source menu

1. Press Source button to pop up source menu
2. Press Up/Down button to select source item
3. Then press OK button to enter

Main menu

General control


1. Press Menu button to pop up main menu
2. Press Up/Down button to select Picture,

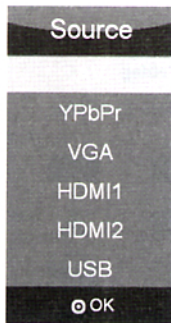

Geometry or Setting menu


3. Then press Right button to enter

Control for Picture menu

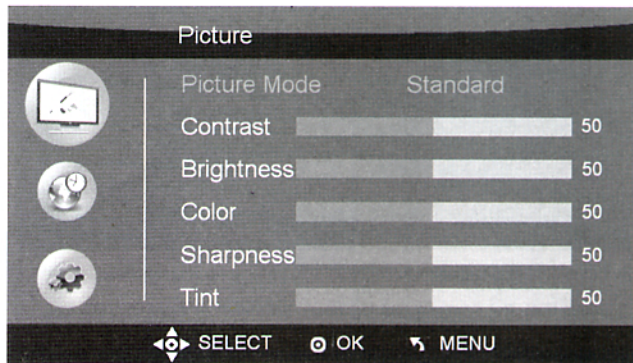


1. Press Left/Right button to select Soft, Standard, Bright or Personal picture mode
2. Note that only Personal picture mode settings can be adjusted, others are pre-set modes
3. Press Up/Down button to select menu item
4. Press OK button to enter
5. Then press Left/Right button to adjust
6. Press Menu button to return, or press Exit button to close menu

Control for Geometry menu

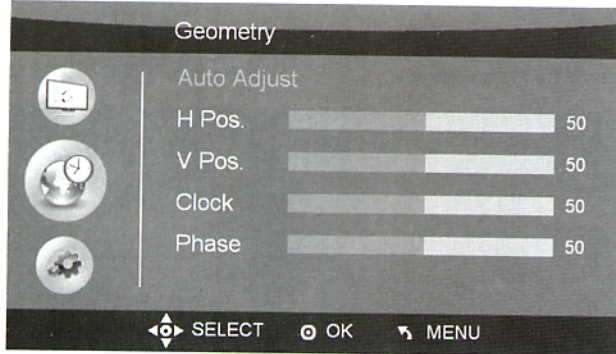

1. Press Left/Right button to do Auto adjust
2. Note that Auto adjust will be done automatically when VGA source timing changed
3. Press Up/Down button to select menu item
4. Press Left/Right button to adjust
5. Press Menu button to return, or press Exit button to close menu

Control for setting menu

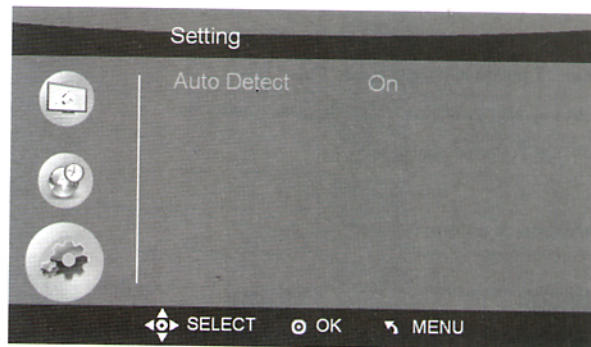

1. Press Left/Right button to set Auto Detect function On or Off
2. Note that when Auto Detect is set On, the converter will automatically switch to the source which is connected with signal lately, except for USB source.

USB menu















General control

1. Press USB button directly or select USB from source menu to enter USB device playback mode
2. Press Menu button to pop up media type selection menu


















3. Press Up/Down button to set which type of media to play
4. Press OK button to confirm
5. Press Left/Right to select USB device (disk alias)
6. Press OK button to browse media file
7. Press Left/Right/Up/Down button to select media file
8. Press OK button to play











Movie playback control

	Play		Repeat
	Pause		Repeat A-<->B
	Fast Backward		Media file information
	Fast Forward		Slow Forward
	Previous		Ratio
	Next		Brightness
	Stop		Contrast

Picture playback control

	Slide show		Zoom in
	Pause		Zoom out
	Previous		Move
	Next		Repeat
	Stop		Brightness
	Rotate clockwise		Contrast
	Rotate anti-clockwise		Capture and save as logo
	Background music		

Audio playback control

	Play		Next
	Pause		Stop
	Fast Backward		Repeat
	Fast Forward		Mute
	Previous		Media file information

V: PACKAGE CONTENTS

Before attempting to use this unit, please check the packaging and make sure the following items are contained in the shipping carton:

- 1) Main unit (ALL TO HDMI CONVERTER BOX)
- 2) User Manual.
- 3) Remote control