HDBaseT 4×4 HDMI Matrix over CAT5e/6/7 Cable # 15282



Operation Manual




Introduction	The HDBaseT [™] 4 by 4 HDMI Matrix over CAT5e/6/7 supports the transmission of video (resolutions up to 1080p Full HD and 1920x1200@60Hz) and multi-channel digital audio from four high definition sources to four outputs over a single CAT5e/6/7 cable (up to 60m) for each output. It supports high resolution digital audio formats such as LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio as well as 3D content that can be displayed when connecting a 3D TV and 3D source. It also has the added benefit of control via IR, RS-232, Telnet or Web GUI
Features	 HDMI, HDCP1.1 and DVI compliant Supports HDMI 3D features Supports resolutions VGA~WUXGA and 480i~1080p dependent upon the output display's EDID settings Supports distances up to 60 meters through CAT5e/6/7 cables Supports 3D signal display dependent upon the output display EDID settings Supports HDMI input up to 15 meters at 8-bit resolution or 10 meters at 12-bit resolution Supports bi-directional IR from input and output locations Supports RS-232, remote control, on-panel control and IP Control (Telnet & Web GUI) 1 U size design Supports LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio transmission Note: Do not connect the CONTROL port to CAT outputs of this device or to CAT inputs or receiver. Doing so may demage the unit
Applications	 HDMI Matrix System Video/TV wall display and control Security surveillance and control Commercial advertising, display and control University lecture hall, display and control Retail sales and demonstration
System Requirements	 HDMI equipped source devices, connect with HDMI cables or DVI equipped source, connect with DVI to HDMI cables HDMI equipped displays (TVs or monitors) or HDMI equipped AV receivers, connect with HDMI cables Industry standard CAT5e/6/7 cables HDBaseT[™] Receivers



Operation Controls and Functions

Front Panel

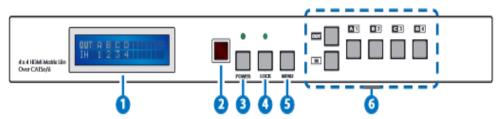

1. LCM:

Displays the setting information of each input and output setting.

2. IR:

IR Receiver window (accepts the remote control signal of this device only). 3. **POWER:**

Press this button to power the device on/off. The LED will illuminate green when the power is on, red when it is in 'Standby' mode.

4. LOCK:

Press this button to lock all the buttons on the panel; press again to unlock. The LED will illuminate when locked.

5. MENU:

Press this button to access the LCM menu system, from here EDID settings can be managed and IP system settings are displayed.

6. A~D/1~4 and OUT/IN:


Press the OUT or IN button to select the output or input mode and then press the required number button to make the selection accordingly. For example, if outputs A~B need to be set to input 1 and outputs C~D need to be set to input 2, then the following sequence of button presses need to be performed:

Press: OUT ►A►B►IN►1►MENU, and then press: OUT►C►D►IN►2► MENU.

Note: If the MENU button is not pressed the selection will not be changed



Back Panel

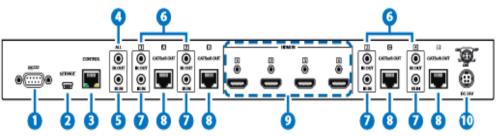

1. RS-232:

Connect to a PC or control system with D-Sub 9-pin cable for control of the matrix via RS-232 commands (please refer to the Section on rs-232 and telnet for a list of commands).

2. SERVICE:

Manufacturer use only.

3. CONTROL:

This port is the link for Telnet or Web GUI controls, connect to an active Ethernet link with an RJ45 terminated cable (for further details, please refer to the section on web GUI).

Warning: Please do not connect this port directly to the PC/Laptop as the Telnet function will not work.

4. ALL IR OUT:

Connect to the IR blaster for IR signal transmission to the source devices. Place the IR blaster in direct line-of-sight of the equipment to be controlled. All signals received from the display side will be relayed to the source devices.

5. ALL IR IN:

Connect to the IR extender for IR signal reception. Ensure that the remote being used is within the direct line-of-sight of the IR extender. It will transmit all signals received through the IR ALL OUT.

6. IR OUT 1~4:

Connect to the IR blasters for IR signal transmission.

Place the IR blaster in direct line-of-sight of the equipment to be controlled. It will transmit the IR signal received from the receiver side according to the selected input.

7. IR IN 1~4:

Connect to the IR extenders for IR signal reception. Ensure that the remote being used is within the direct line-of-sight of the IR extender. It will send out the IR signal received to the selected IR OUT (A-D).

8. CAT5e/6/7 OUT A~D:

Connect the CAT outputs to the CAT input port of the receiver units with a single CAT5e/6/7 cable for HDMI Audio/Video and IR control signal transmission.

9. HDMI IN 1~4:

Connect to the HDMI input source devices such as a DVD player or a Settop Box with HDMI cable or DVI to HDMI cable.

10. DC 24V:


Plug the 24 V DC power supply into the unit and connect the adaptor to an AC outlet.



Warning: Please do not connect the CAT5e/6/7 output to the receiver's LAN port.

IR Cable Pin Assignments

Remote Control

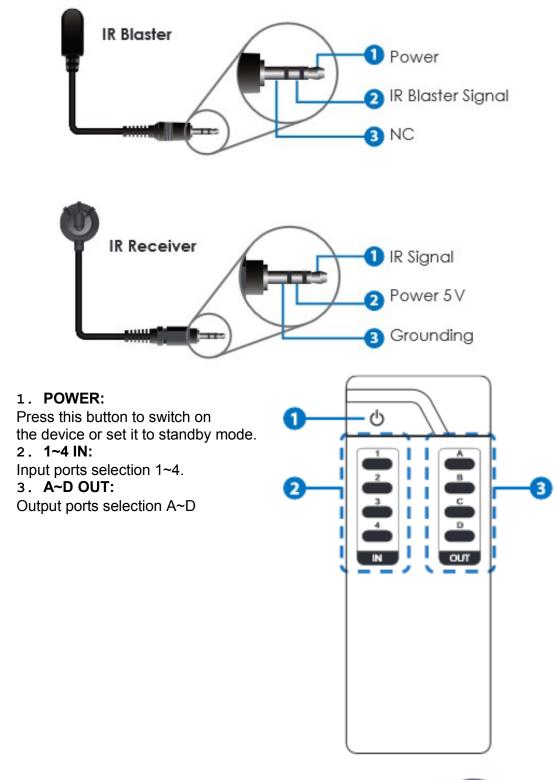



RS-232 Pin Assignments

HDMI MATRIX		
PIN	ASSIGNMENT	
1	N/C	
2	Tx	
3	Rx	
4	N/C	
5	GND	
6	N/C	
7	N/C	
8	N/C	
9	N/C	

REMOTE CONTROL		
PIN	ASSIGNMENT	
1	N/C	
2	Rx	
3	Tx	
4	N/C	
5	GND	
6	N/C	
7	N/C	
8	N/C	
9	N/C	

Baud Rate: 19200 bps Data Bit: 8-bit Flow Control: None Parity: None Stop Bit: 1-bit

RS-232 and Telnet Commands

Command	Description
help	Display all available commands
A1~A4	Switch Output A to 1~4
B1~B4	Switch Output B to 1~4
C1~C4	Switch Output C to 1~4
D1~D4	Switch Output D to 1~4
AB1~AB4	Switch Output ABCD to 1~4 at the same time
SETIP <ip> <subnet> <gw></gw></subnet></ip>	Setting IP. SubNet. GateWay <static ip=""></static>
RSTIP	IP configuration was reset to factory defaults <dhcp></dhcp>
IPCONFIG	Display the current IP config
P0	Power Off
P1	Power On
I1~I4	Switch all the output to 1~4
ST	Display the current matrix state and firmware version



RS	System Reset to H4
EM	Setting EDID MODE. 1-STD 2-TV
?	Display all available commands
QUIT	Exit (Telnet only)

Note: Commands will not be executed unless followed by a carriage return. Commands are not case-sensitive.


Telnet Controls

Before attempting to use the telnet control, please ensure that both the Matrix (via the 'LAN /CONTROL' port) and the PC/Laptop are connected to the active networks.

To access the telnet control in Windows 7, click on the 'Start' menu and type "cmd" in the Search field then press enter.

Under Windows XP go to the 'Start' menu and click on "Run", type "cmd" with then press enter.

Under Mac OS X, go to Go►Applications►Utilities►Terminal See below for reference.

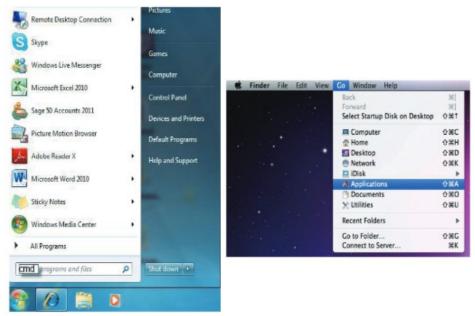

Once in the command line interface (CLI) type "telnet", then the IP address of the unit and "23", then hit enter. **Note:**

The IP address of the Matrix can be displayed on the device's LCM monitor by pressing the Menu button twice.





This will bring us into the device which we wish to control. Type "HELP" to list the available commands.

telnet-> help	
A1~A8 : Switch Output A to 1~4 B1~B8 : Switch Output B to 1~4 C1~C8 : Switch Output D to 1~4 D1~D8 : Switch Output D to 1~4 BCD4~ABCD4 : Switch output ABCD to 1~4 at the same time SETIP <ip> (SubNet> <gw> : Setting IP.SubNet.GateWay(Static IP) RSTIP : IP Configuration Was Reset To Factory Defaults(DHCP) IPCONFIG : Display the current IP config P0 : Power Off P1 : Power On I1~I4 : Switch all the output to 1~4 ST : Display the current matrix state and firmware version RS : System Reset to H8</gw></ip>	
EM : Setting EDID MODE. 1-STD 2-TU. ? : Display all available commands QUIT : Exit	

Type "IPCONFIG" To show all IP configurations. To reset the IP, type "RSTIP" and to use a set static IP, type "SETIP" (For a full list of commands, see the Section on telnet and RS-232 commands). Note:

Any commands will not be executed unless followed by a carriage return. Commands are case-insensitive. If the IP is changed then the IP Address required for Telnet access will also change accordingly.

Web GUI Control

Control of the categories	- Et 'r 🕺 🚾 🗤	ą.
- 0 het 🖬 🖬		
👷 Involten 🛛 🙀 🚺 Geographic France 🥷 Epipelie Boue Essance e		
ý 14.	商+図・2 ⊕ = here beye	Tuh- 🔐 🖧
Data Dend Database		
Power Status		
Power Smarr ON		
IP States		
12 A.A.S		8
Site Net Kinder 30 Televizer Net Kinder 23		
Matrix Status		
Carlor Ford A [674 Not 2] Contra Not 8 [654 Not 3] Carlor Not 9	anto (chertrent) (chertra front) (cher	Part I
EDID Mode		

Click on the 'Control' tab to control power, input/output ports, EDID and reset mode



Statue Control liver Setting	9			
Power Control				
Results Results				
Matrix Control				
Guilfia Poir A Japat Sot 1 💌	OutPut Put R lap42042	Datha Fun C agethert 🗵	Datha thin D Jagobari	
Al DalPa Sa Ti Davidge Ref				
EDID Mode				
1-610 ×				
System Reset				
Test				

Clicking on the 'User Setting' tab allows you to reset the IP configuration. The system will ask for a reboot of the device every time any of the settings are changed. The IP address needed to access the Web GUI control will also need to be changed accordingly on the web address entry bar.

Section Concret Conversion		
P Address Selection		
Autors Type DiCCMassP (* Neck IN-54cm State)		
anie Il Veddanese Sanie p		
Sature State 2014 1/100 1/100 1/10		
Thomas Stationer		
	Determined (Producered Marcher Off)	6 - 8,00

Specifications

Video Bandwidth Input Ports	225 MHz/6.75 Gbps 4×HDMI, 5×IR Extender, 1×RS-232, 1×RJ-45 (Control), 1×Mini USB Type B (For firmware updated only)
Output Ports	4×CAT5e/6/7, 5×IR Blaster
ESD Protection	Human-body Model:
	± 8kV (Air-gap discharge)
	± 4kV (Contact discharge)
Power Supply	24V/2.7A DC (US/EU standards, CE/FCC/
	UL certified)
Dimensions	436mm (W)×255mm (D)×48mm (H)
Weight	3234 g
Chassis Material	Metal
Silkscreen Color	Black
Operating Temperature	0 °C~40 °C/32 °F~104 °F
Storage Temperature	−20 °C~60 °C/−4 °F~140 °F
Relative Humidity	20~90% RH (non-condensing)
Power Consumption	35W



Connection Diagram

