

**HDBaseT 8x8 UHD HDMI over CAT5e/6/7
Matrix with LAN Serving - # 15437**



Operation Manual

Introduction

The 4K2K 8 by 8 HDMI Matrix over CAT5e/6/7 supports the transmission of video (resolutions up to 4K2K Full HD), multi-channel digital audio and control via IR, RS-232, Telnet or Web GUI from eight high definition sources to eight outputs over a single CAT5e/6/7 cable (up to 100m) for each output.

It supports high resolution digital audio formats such as LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio as well as 3D content that can be displayed when connecting a 3D TV and 3D source. Additionally, the LAN connectivity will allow a 100BaseT network to be served to smart TVs or games consoles. The Power over Cable (PoC) function can power compatible receivers, providing greater flexibility in installations.

Applications

- HDMI Matrix System
- Video/TV wall display and control
- Security surveillance and control
- Commercial advertising, display and control
- University lecture hall, display and control
- Retail sales and demonstration

Features

- HDMI, HDCP 1.1 and DVI compliant
- Supports resolutions VGA~WUXGA, 4K2K@24/25/30 & YUV_420 and 480i~1080p dependent upon the output display's EDID settings
- Supports distances up to 100 meters through CAT6/7 cables
- Supports 3D signal display dependent upon the output display EDID settings
- Supports PoC (Power over Cable) on compatible receivers only
- Supports HDMI input up to 15 meters at 8-bit resolution or 10 meters at 12-bit resolution
- Supports bi-directional IR from input and output locations
- Supports RS-232, remote control, on-panel control and IP Control (Telnet & Web GUI)
- Supports LAN serving function through the LAN port
- 2U size design
- Supports external and internal EDID settings
- Supports LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio transmission

Note:

1. *The PoC function is designed for powering compatible receiver units only—non-PoC receivers will need their own power supply. Receivers of another brand may not be compatible.*




2. Do not connect the LAN port to CAT outputs of this device or to CAT inputs or receiver. Doing so may damage the unit.
3. Do not connect more than one Ethernet/network link within the Matrix system, doing so may trigger the device to shoot down.

System Requirements

- HDMI equipped source devices, connect with HDMI cables or DVI equipped source, connect with DVI to HDMI cables
- HDMI equipped displays (TVs or monitors) or HDMI equipped AV receivers, connect with HDMI cables
- Industry standard CAT5e/6/7 cables
- HDBaseT™ Receivers

Operation Controls and Functions

Front Panel

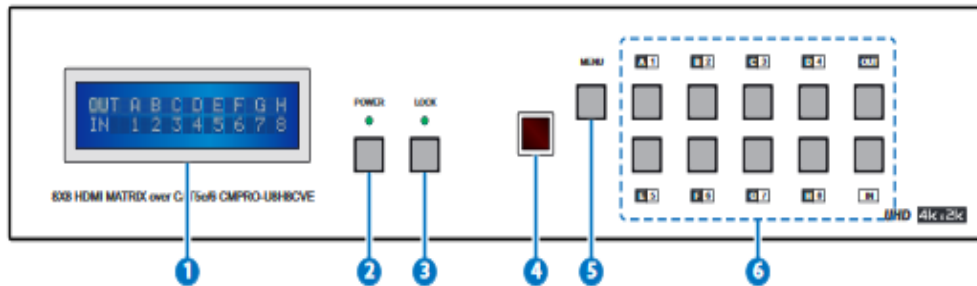

1. LCM :

Displays the setting information of each input and output setting.

2. POWER:

Press this button to power the device on/off. The LED will illuminate green when the power is on, red when it is in 'Standby' mode.

3. LOCK:

Press this button for 3 seconds to lock all the buttons on the panel; press again for 3 seconds to unlock. The LED will illuminate green when locked.

4. IR:

IR Receiver window (accepts the remote control signal of this device only).

5. MENU:

Press this button to access the LCM menu system, from here EDID settings can be managed and IP system settings are displayed.

6. 1~8/A~H and In/Out:

Press the Out or In button to select the output or input mode and then press the required number button to make the selection accordingly.

For example, if outputs A~D need to be set to input 1 and outputs E~H need to be set to input 2, then the following sequence of button presses need to be performed:


Press: Out → A → B → C → D → In → 1 → Menu,

and then press: Out → E → F → G → H → In → 2 → Menu.

Note:

If the menu button is not pressed the selection will not be changed.

Rear Panel

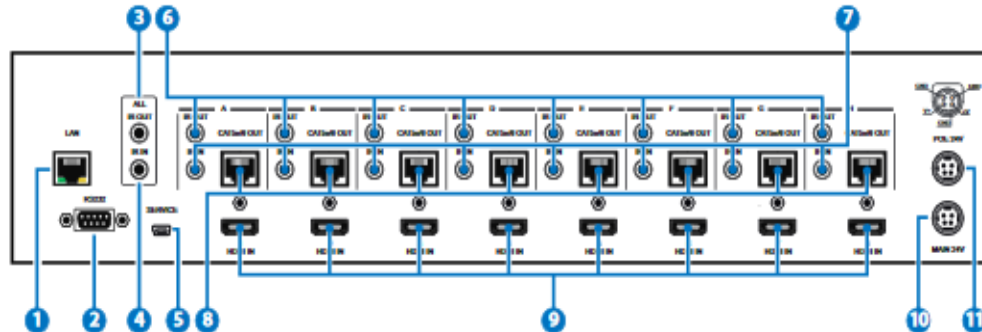

1. LAN:

Connect to an active network for LAN serving and Telnet and Web GUI control (refer to Sections on Telnet and Web GUI).

When the Matrix or any compatible LAN equipped receivers are connected to a network, this allows the network access (including internet access if available) to be shared between the Matrix and all connected receivers. Connect any Ethernet equipped device e.g. a Smart TV or games console to the LAN port of a receiver for that device to share the network/internet access.

Warning: Please do not connect more than one active Ethernet link within the Matrix system.

2. RS-232:

Connect to a PC or control system with D-Sub 9-pin cable for the transmission of RS-232 commands.

3. ALL IR OUT:

Connect to the IR blaster for IR signal transmission to the source side. Place the IR blaster in direct line-of-sight of the equipment to be controlled for it will blaster out all signal received from the IR IN at the receiver sides.

4. ALL IR IN:

Connect to the IR extender for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR extender for it will send out the signal to all receiver's IR OUT.

5. SERVICE:

Manufacturer use only.

6. IR OUT 1~8:

Connect to the IR blasters for IR signal transmission.

Place the IR blaster in direct line-of-sight of the equipment to be controlled for it will blaster out the IR signal received from the receiver side chosen by input selection.

7. IR IN 1~8:

Connect to the IR extenders for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR extender for it will send out the IR signal to the selected receiver's IR OUT.

8 . CAT5e/6/7 OUT 1~8:

Connect from these CAT outputs to the CAT input port of the receiver units with a single CAT5e/6/7 cable for HDMI Audio/Video and IR/RS-232 control signal transmission.

Warning: Please do not connect the CAT5e/6/7 cable into the receiver's LAN port.

9 . HDMI IN 1~8:

Connect to the HDMI input source devices such as a DVD player or a Set-top Box with HDMI cable or DVI to HDMI cable.


10 . DC 24V MAIN POWER:

Plug the 24 V DC power supply into the unit and connect the adaptor to an AC outlet.

11 . PoC 24V:

Plug the 24 V PoC power supply into the unit and connect the adaptor to an AC outlet. This unit will power PoC (Power over Cable) capable receiver units.

Side Panel

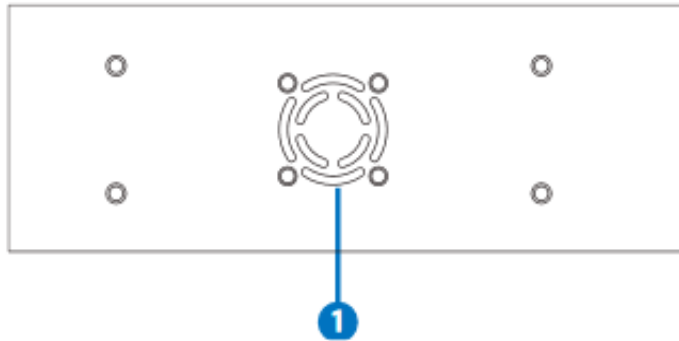


1. Fan Ventilator:



These are air ventilation areas, **DO NOT** block these areas or cover it with any object. Please allow adequate space around the unit for air circulation

Remote Control

1. **POWER:** Press this button to switch on the device or set it to standby mode.
2. **IN:** Input ports selection 1~8.
3. **OUT:** Output ports selection A~H

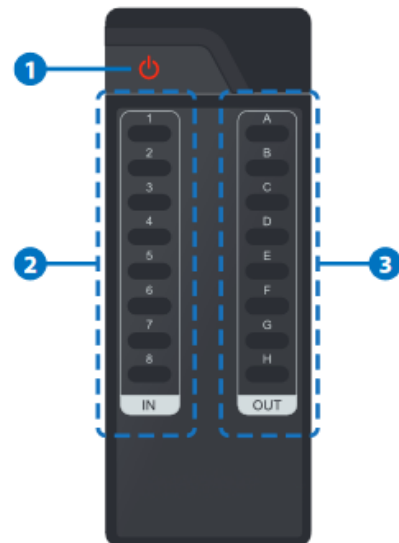

IR Cable Pin Assignment

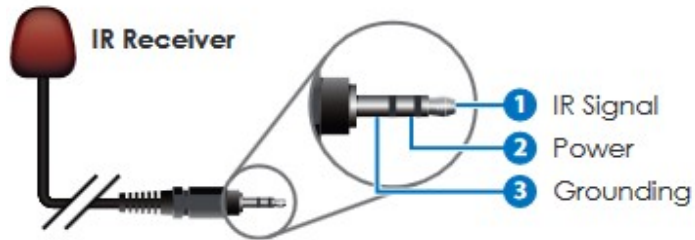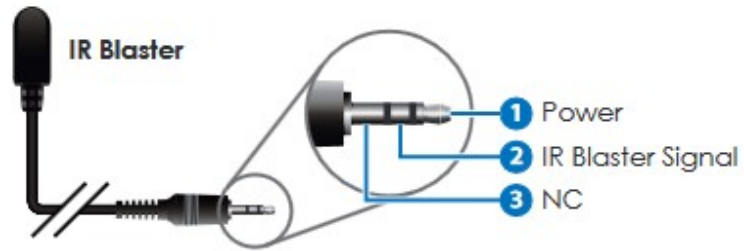

D-Sub 9-Pin Assignment

HDBaseT 8x8 Matrix	
Pin	Assignment
1	N/C
2	Tx
3	Rx
4	N/C
5	GND
6	N/C
7	N/C
8	N/C
9	N/C



Remote Control	
Pin	Assignment
1	N/C
2	Rx
3	Tx
4	N/C
5	GND
6	N/C
7	N/C
8	N/C
9	N/C



Baud Rate: 19200 bps

Data bit: 8 bits

Parity: None

Stop Bit: 1

Flow Control: None

**RS-232 and Telnet
Commands**


Command	Description
A1~A8	Switch Output A to 1~8
B1~B8	Switch Output B to 1~8
C1~C8	Switch Output C to 1~8
D1~D8	Switch Output D to 1~8
E1~E8	Switch Output E to 1~8
F1~F8	Switch Output F to 1~8
G1~G8	Switch Output G to 1~8
H1~H8	Switch Output H to 1~8
ABCD...1~ABCD...8	Switch Output A B C D... to 1~8 at the same time
SETIP <IP> <SubNet> <GW>	Setting IP. SubNet. GateWay (Static IP)
RSTIP	IP Configuration Was Reset To Factory Defaults <DHCP>
IPCONFIG	Display the current IP config
P0	Power OFF
P1	Power ON
STORE 01~08	Store current I/O position(01~08)
PRESET 01~08	Recall current I/O position(01~08)
SHOW 01~08	Show current I/O position(01~08)
NAME N1 N2	Name the stored port N1 (01~08) no more than 8 characters, N2 (ABCDEFGH)
I1~I8	Switch all the Output to 1~8
ST	Display the current matrix status and F/W version
RS	System Reset to A1, B2, C3, D4, E5, F6, G7, H8
EM	Setting EDID MODE. 1-STD 2-TV
UARTBAUD1~8	Set output A~D's uart baud rate from 1~6 1: 9600bps 2: 14400bps 3: 19200bps

	4: 38400bps 5: 57600bps 6: 115200bps
UARTSW1~8	Switch output's UART to A~H and allow Matrix to send commands to Receiver's connected RS-232 device.
UARTSW0	Switch output's UART to MCU. Restoring RS-232 control to the Receiver output back to Matrix.
UARTBAUD?	Display all the outputs UART baud
UARTSW?	Display the UART switching state
?	Display all the available commands
Quit	Exit(for telnet only)

Note:


Any commands will not be executed unless followed by a carriage return. Commands are case insensitive.

RS-232 UART Command Illustration Diagram

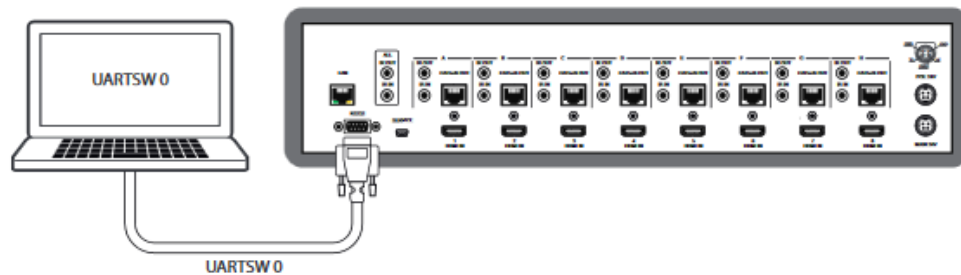


Note:

This command allows RS-232 to control the Matrix.

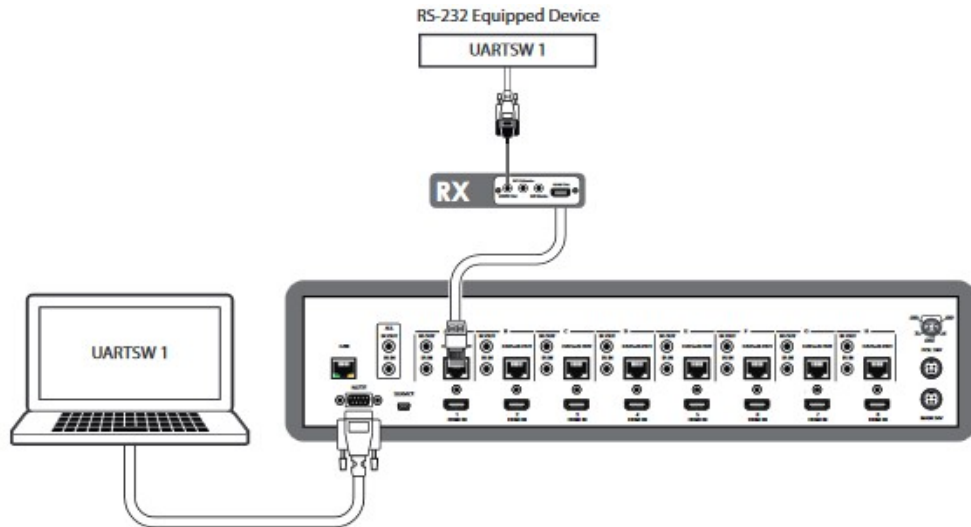


Note:

This command allows RS-232 to control the RS-232 device connected to output A's Receiver.

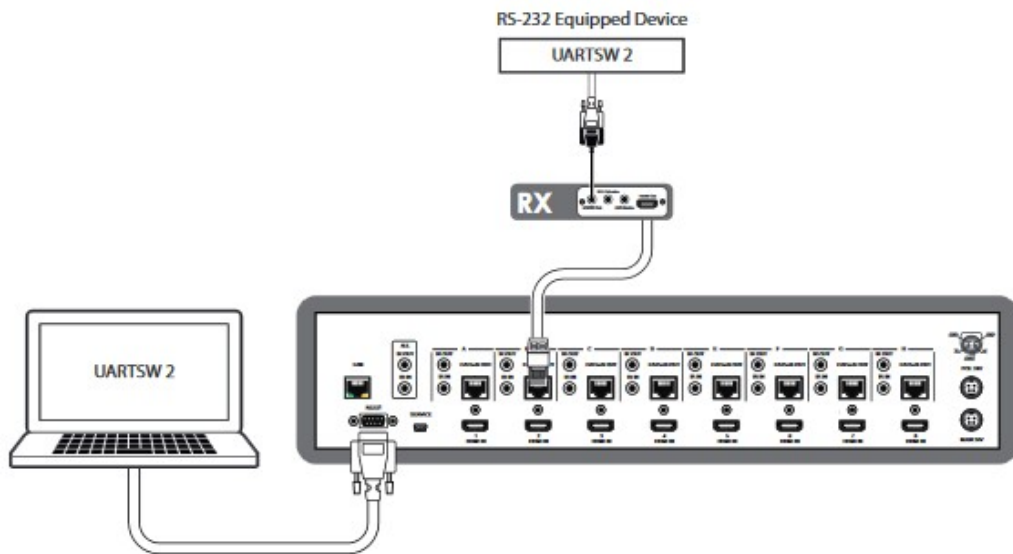


Note:

This command allows RS-232 to control the RS-232 device connected to output B's Receiver.

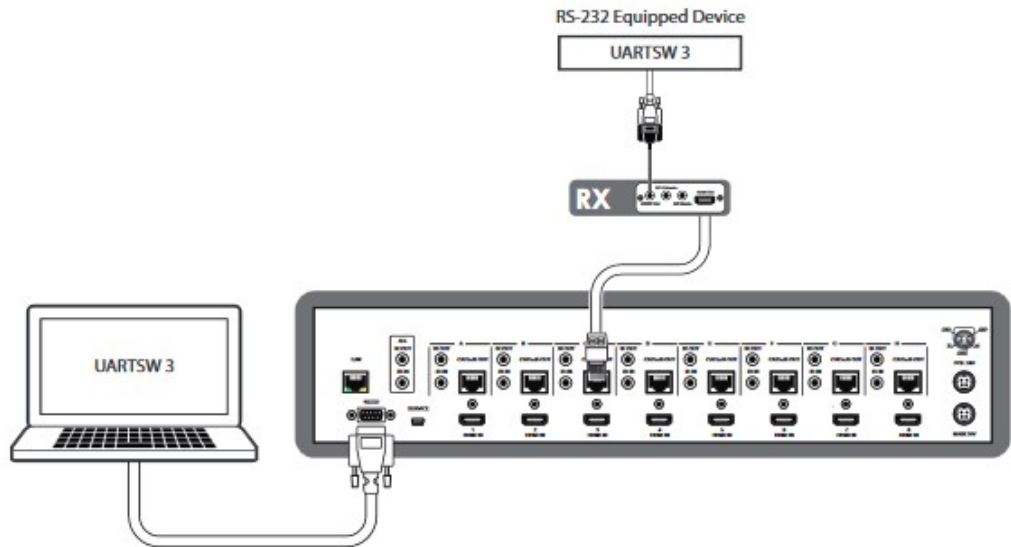


Note:

This command allows RS-232 to control the RS-232 device connected to output C's Receiver.

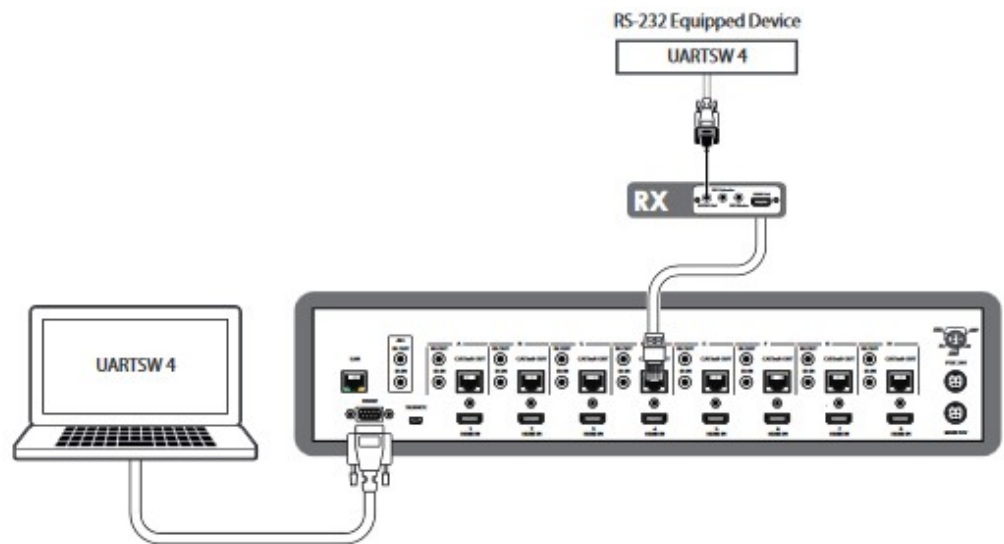


Note:

This command allows RS-232 to control the RS-232 device connected to output D's Receiver.

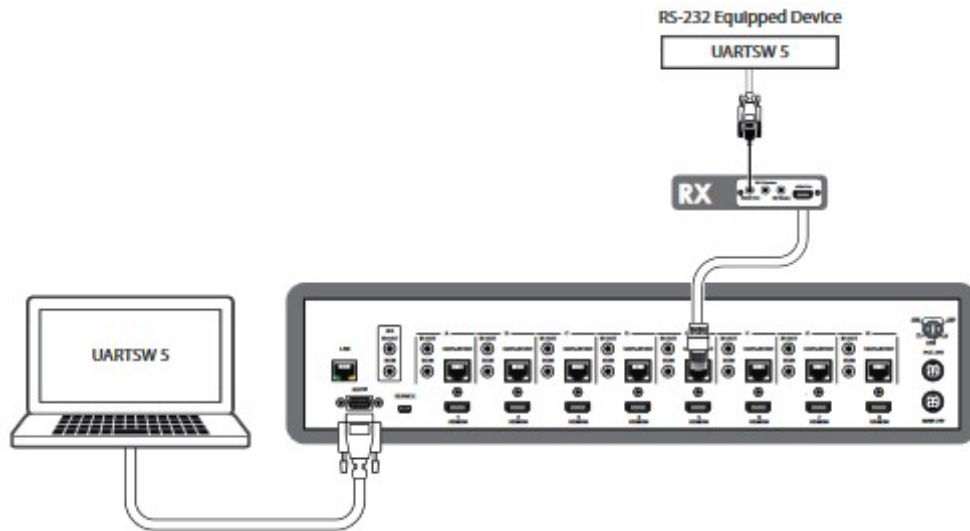


Note:

This command allows RS-232 to control the RS-232 device connected to output E's Receiver.

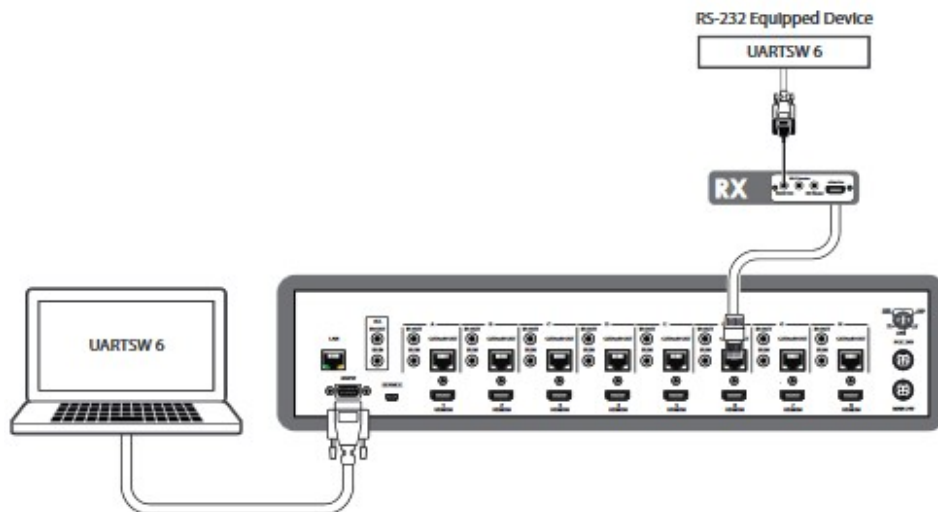


Note:

This command allows RS-232 to control the RS-232 device connected to output F's Receiver.

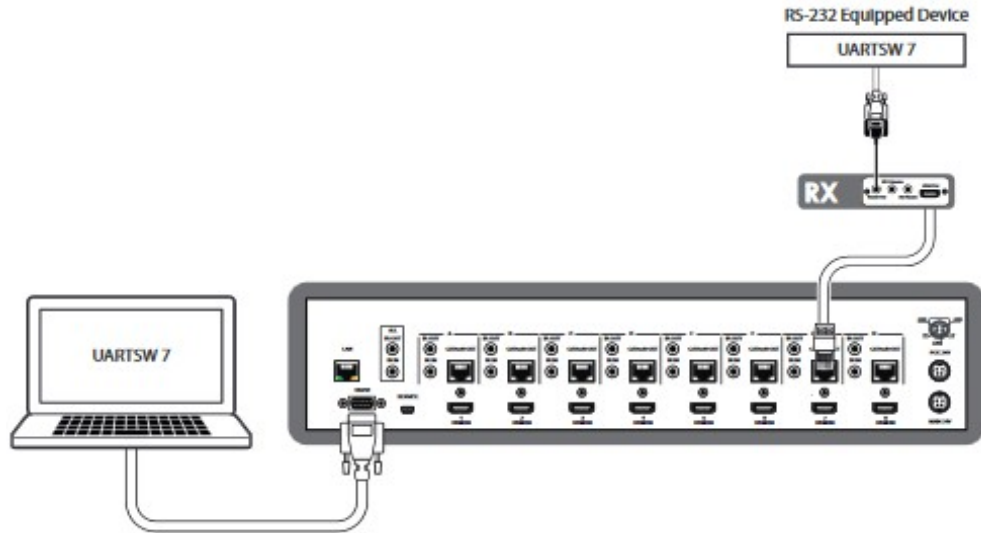

Note:

This command allows RS-232 to control the RS-232 device connected to output G's Receiver.

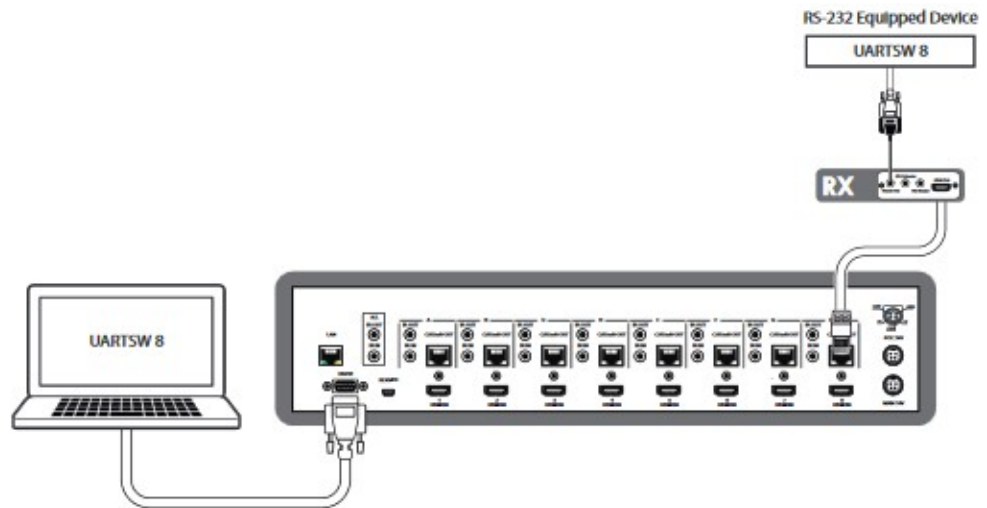

Note:

This command allows RS-232 to control the RS-232 device connected to output H's Receiver.


Telnet Control

Before attempting to use the telnet control, please ensure that both the Matrix (via the 'LAN port) and the PC/Laptop are connected to the active networks.

To access the telnet control in Windows 7, click on the 'Start' menu and type "cmd" in the Search field then press enter.

Under Windows XP go to the 'Start' menu and click on "Run", type "cmd" with then press enter.


Under Mac OS X, go to Go → Applications → Utilities → Terminal
See below for reference.

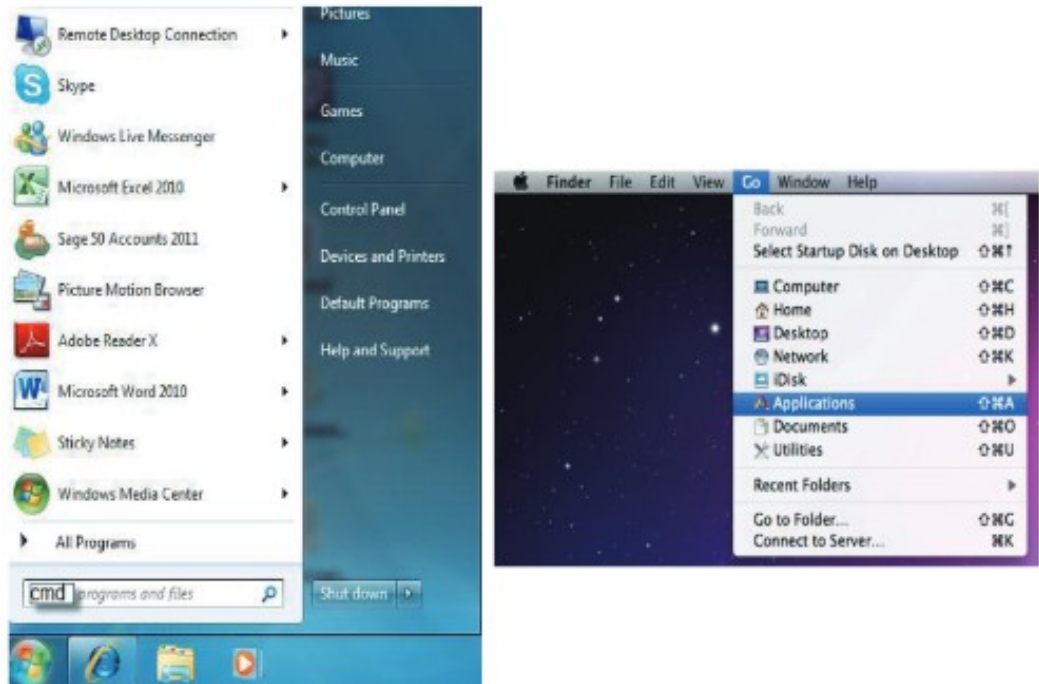

Once in the command line interface (CLI) type "telnet", the IP address of the unit you wish to control and "23", then hit enter.

Note:

The IP address of the Matrix can be displayed on the device's LCM monitor by pressing the Menu button twice/three times.

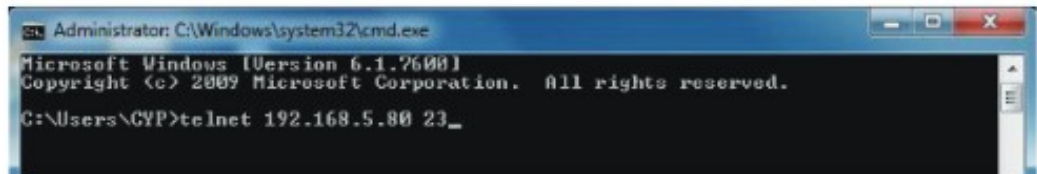

This will bring us into the device which we wish to control. Type "HELP" to list the available commands.

```
Telnet 192.168.5.39
telnet-> ?
A1^A8 : Switch Output A to 1^8
B1^B8 : Switch Output B to 1^8
C1^C8 : Switch Output C to 1^8
D1^D8 : Switch Output D to 1^8
E1^E8 : Switch Output E to 1^8
F1^F8 : Switch Output F to 1^8
G1^G8 : Switch Output G to 1^8
H1^H8 : Switch Output H to 1^8
ABCD...1^ABCD...8 : Switch output ABCD... to 1^8 at the same time
SETIP <IP> <SubNet> <GW> : Setting IP.SubNet.GateWay<Static IP>
RSTIP : IP Configuration Was Reset To Factory Defaults<DHCP>
IPCONFIG : Display the current IP config
P0 : Power Off
P1 : Power On
STORE 01^08: STORE current I/O position <01^08>
PRESET 01^08: RECALL the store I/O position <01^08>
SHOW 01^08: SHOW current port's I/O position <01^08>
NAME N1 N2: NAME the stored port N1<01^08> no more than 8 charactors N2<
ABCDEFGH>
I1^I8 : Switch all the output to 1^8
ST : Display the current matrix state and firmware version
RS : System Reset to A1,B2,C3,D4,E5,F6,G7,H8
EM : Setting EDID MODE. 1-STD 2-IU.
UARTBAUD1^UARTBAUD8 : Setting outputA^H's uart baud (1:9600bps,2:14400bps,3:1920
0bps,4:38400bps,5:57600bps,6:115200bps)
UARTSW1^UARTSW8 : Switch output's uart to A^H
UARTSW0 : Switch output's uart to MCU
UARTSW? : Display the uart switching state
? : Display all available commands
QUIT : Exit
```


Type "IPCONFIG" To show all IP configurations. To reset the IP, type "RSTIP" and to use a set static IP, type "SETIP" (For a full list of commands, see Telnet Commands Section).

Note:


Any commands will not be executed unless followed by a carriage return. Commands are not case-sensitive. If the IP is changed then the IP Address required for Telnet access will also change accordingly.

Web GUI Control


On a PC/Laptop that is connected to the same active network as the Matrix, open a web browser and type device's IP address on the web address entry bar. The browser will display the device's status, control and User setting pages.

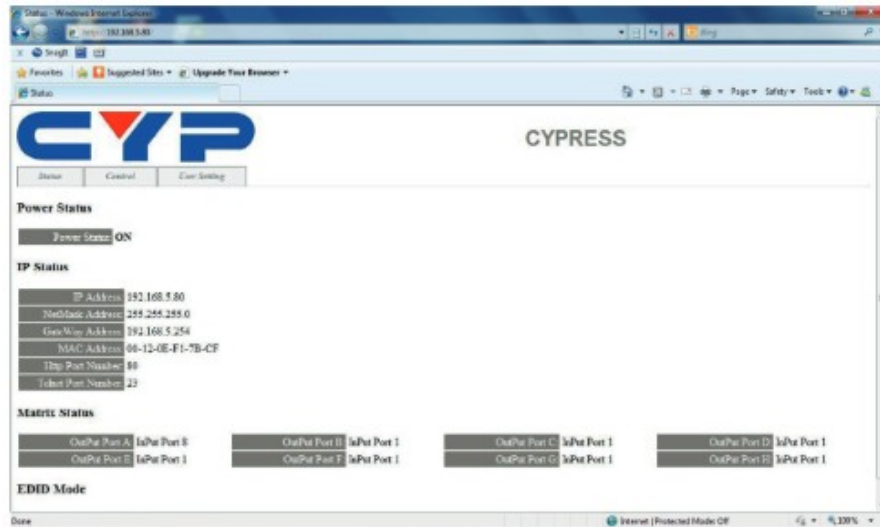

Click on the 'Control' tab to control power, input/output ports, EDID and reset mode.

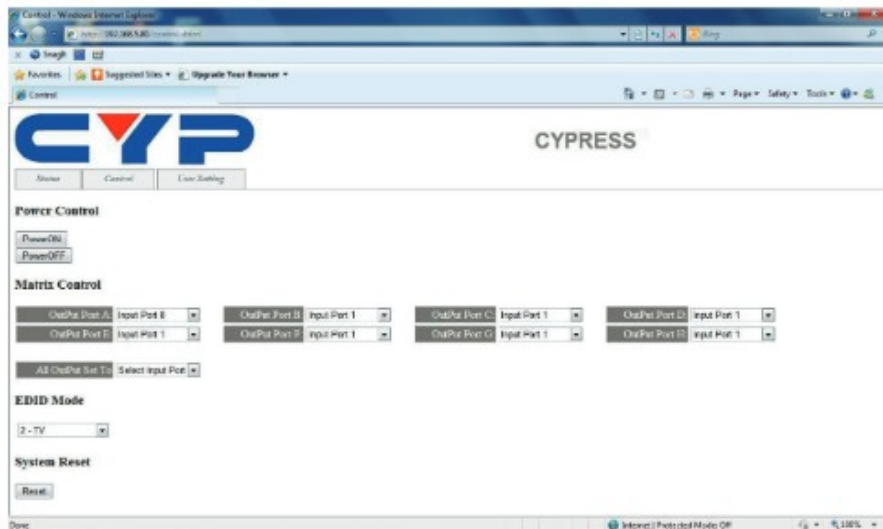

Clicking on the 'User Setting' tab allows you to reset the IP configuration. The system will ask for a reboot of the device every time any of the settings are changed. The IP address needed to access the Web GUI control will also need to be changed accordingly on the web address entry bar.

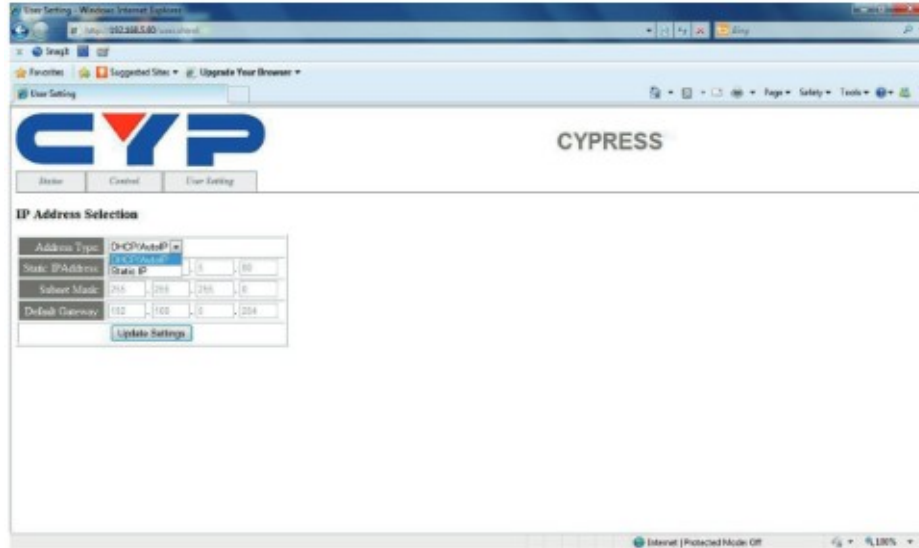

Specifications

Video Bandwidth	300 MHz/9 Gbps
Input Ports	8×HDMI, 9×IR Extender, 1×RS-232, 1xLAN, 1×Mini USB-B type (for firmware update only)
Output Ports	8×CAT5e/6/7, 9×IR
Power Supply	24 V/6.25 A DC (US/EU standards, CE/FCC/UL certified)
ESD Protection	Human Body model: ± 8kV (air-gap discharge) ± 4kV (contact discharge)
Dimensions	438 mm (W)×249 mm (D)×93mm (H)
Weight	4402g
Chassis Material	Metal
Silkscreen Color	Black
Operating Temperature	0 °C~40 °C/32 °F~104 °F
Storage temperature	-20 °C~60 °C/-4 °F~140 °F
Relative Humidity	20~90% RH (no condensation)
Power Consumption	65 W Tx (Main), 56W Rx (PoE)

CAT5e/6/7 Cable Specification

Cable Type	Range	Pixel Clock Rate	Video Data Rate	Supported Video Formats
CAT5e/6/7	100 m	≤225 Mhz	≤5.3 Gbps (HD Video)	Up to 1080p@60 Hz, 36-bit, 3D (data rates lower than 5.3 Gbps or below 225 MHz TMDs clock).

Supported Resolutions	Input	Output
640x480@60/72/75/85	Yes	Yes
800x600@56/60/72/75/85	Yes	Yes
1024x768@60/70/75/85	Yes	Yes
1280x720@60	Yes	Yes
1280x1024@60	Yes	Yes
1600x1200@60	Yes	Yes
1920x1200@60RB	Yes	Yes
3840x2160p@24/25/30	Yes	Yes
4096x2160p@24	Yes	Yes
4096x2160p@50/60(YUV_420)	Yes	Yes
480I/576I	Yes	Yes
480P/576P	Yes	Yes
720P@50/60	Yes	Yes
1080I@50/60	Yes	Yes
1080P@50/60	Yes	Yes
1080P@24/25/30	Yes	Yes

Connection Diagram

